


## 1. CAUTIONS :

- 1.1 Read the wiring diagram and operation manual before wiring; Any damages cause by wrong wiring are beyond our warranty.
- 1.2 Do not install the power board in humid environment to avoid signal interference.
- 1.3 Use the communication wire UL2464 / 24 AWG or 26 AWG 3C twin -wire braid shield with isolated feature.

## 2. SPECIFICATION :

### 2.1 Appearance

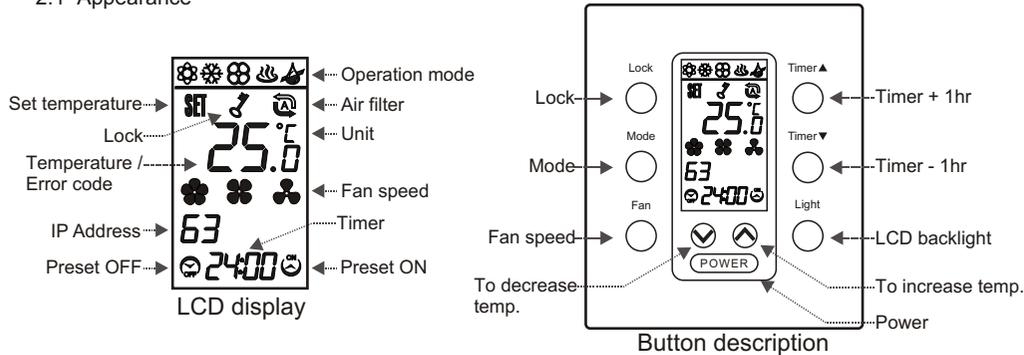

- 2.2 Operation temperature : 0°C~50°C , < 90%RH ( Non - Condensing )
- 2.3 Storage temperature : -10°C~60°C , < 90%RH ( Non - Condensing )
- 2.4 Power supply : Power supplied by power board - DC 5V ( If communication wire is over 30 meters, an extra DC power is required ) ( DC5V 250mA )
- 2.5 Temperature control range : 0°C to 50°C; in 0.5°C steps.
- 2.6 Key card ( Remote control ) Input x 1
- 2.7 JP1 function selection jumper x 1

## 3. FUNCTION DESCRIPTION :

### 3.1 Buttons description

#### 3.1.1 Mode

- 3.1.1.1 Press Mode button to set auto air conditioning, cooling, fan, heating and dehumidifying mode.
- 3.1.1.2 When switching to auto air conditioning, cooling or heating mode, Fan speed will be switched to auto.
- 3.1.1.3 When switching to fan or dehumidifying mode, Fan speed will be switched to LOW.
- 3.1.1.4 Auto air conditioning is only available when JP1 short circuit.

#### 3.1.2 Fan

- 3.1.2.1 Under auto air conditioning, cooling and heating mode, 4 fan speeds ( auto, high, medium and low ) are effective by pressing Fan button.
- 3.1.2.2 Under fan and dehumidifying mode, 3 fan speeds ( high, medium and low ) are effective by pressing Fan button.

#### 3.1.3 Set temperature

- 3.1.3.1 Button: Adjust temperature +0.5°C, able to set the max limit for heating when press for 3 second in power off status, range 0°C~ 35°C, the heating symbol will blink. It will save the setting after 10 seconds.
- 3.1.3.2 Button: Adjust temperature -0.5°C, able to set the min limit for cooling when press for 3 second in power off status, range 0°C~ 35°C, the cooling symbol will blink. It will save the setting after 10 seconds.
- 3.1.3.3 Under auto air conditioning, cooling, heating and dehumidifying mode, press and to adjust temperature. Temperature control range from 10°C to 35°C, in 0.5°C steps.

- 3.1.3.4 Temperature setting is not effective under Fan mode.
- 3.1.3.5 While setting temperature, the display will show SET and set point value then returns to room temperature display in 3 seconds.
- 3.1.3.6 Whenever set point was adjusted ( by LCN or PC ), the display will show SET and set point for 3 seconds and return to room temperature.

#### 3.1.4 Lock

- 3.1.4.1 Panel lock : Regardless of mode ( except error code alarm ), press Lock button for 3 seconds to lock / unlock the panel. Panel lockup status : when locked, the icon displayed in panel.
- 3.1.4.2 Main control lock : When the icon flashes, it indicates the panel was locked by main controller, DEI-758FLC can not be unlocked by itself.
- 3.1.4.3 When lock icon displayed, mode setting, fan speed selection and temperature setting are not effective.

- 3.1.5 Power control : Regardless of mode ( except error code alarm ), press POWER button to ON / OFF air conditioning.

#### 3.1.6 Timer

- 3.1.6.1 In power ON status, press Timer or Timer to preset A / C OFF. Timer setting range from 1 to 24 hours, in 1 hr steps.
- 3.1.6.2 In power OFF status, press Timer or Timer to preset A / C ON. Timer setting range from 1 to 24 hours, in 1 hr steps.
- 3.1.6.3 It displays icon to indicate A / C preset ON ; It displays icon to indicate A / C preset OFF.
- 3.1.6.4 After timer set, the panel will countdown by itself : When time is up, panel will send a signal to power board to ON / OFF power board ( A / C ).
- 3.1.6.5 For the duration of timer, press Power button, Timer or Timer , it will clear timer set.
- 3.1.7 Light : Regardless of mode ( except error code alarm ), press Light button to control LCD backlight ON / OFF ; The backlight will be on constantly for error codes.
- 3.1.8 Room key card ( remote ) control input
  - 3.1.8.1 In power ON status, card key input from Short to Open, it will switch off power board.
  - 3.1.8.2 In power ON status, card key input from Open to Short, no response.
  - 3.1.8.3 In power OFF status, card key input from Short to Open, no response.
  - 3.1.8.4 In power OFF status, card key input from Open to Short, it will switch on power board.
- 3.1.9 Auto air conditioning in power off status : while 758PN is executing auto air conditioning in power off status, room temperature flashes.

## 4. Error elimination :

### 4.1 Error codes display

- 4.1.1 "E1" sensor failure
- 4.1.2 "EE" memory failure
- 4.1.3 "FA" fire alarm ( room temperature over 55°C )
- 4.1.4 "EC" communication failure ( communication failure for 20 seconds )
- 4.1.5 "E3" PCB board is over high
- 4.1.6 "tA" PCB board is over 95°C